


Cap-off Installation



1


Cap-off
Unused
Pop-up
Sprinklers

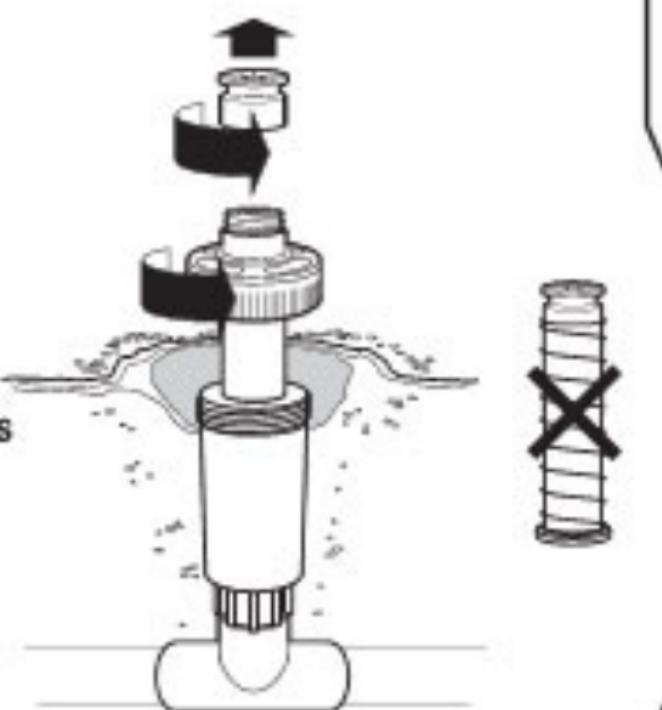

- 1.) Remove internal sprinkler components (the stem nozzle and spring).

2

- 1 Retain cap seal

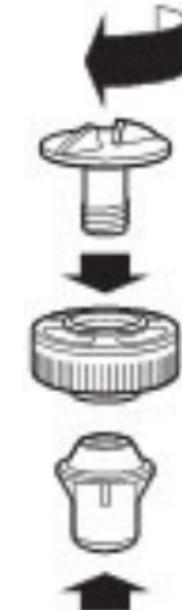

3



- 2.) Retain cap and seal from spray head.
- 3.) Disassemble cap-off device.
- 4.) Place tab portion through top of spray head cap.
- 5.) Thread on lower portion of cap-off device.
- 6.) Tighten lower portion to seal.

- 7.) Thread completed assembly onto spray head.



Irrigation Depot